


## Virtual Power Output (VPO)

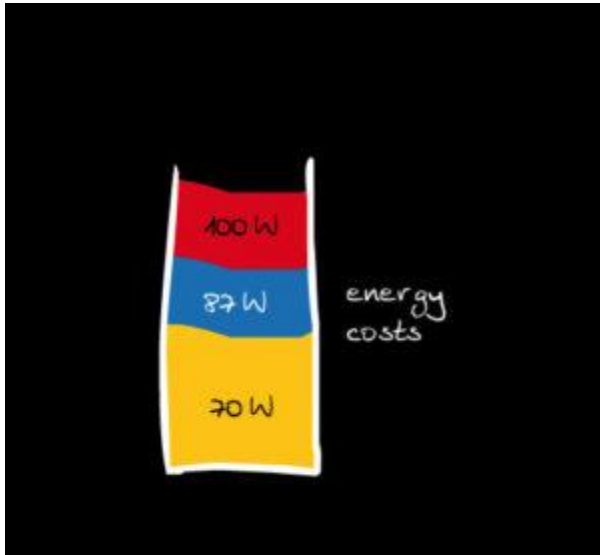

In the past, to reach required lighting levels, there was no choice over the power of light sources employed as it was imposed by the manufacturer.

Without remote management, a lighting asset manager would, for example, have to use a 100W lamp to reach the lighting level, even if 85W would suffice.

With remote management, it is possible to vary the luminous intensity precisely so that it corresponds to the required level, without wasting energy.